

Connect BH71 & BH71 Pro & BH71 Lite Headset to PC

Introduction

You can connect the headset to the PC via the following methods:

- Pair the headset with the PC directly
- Pair the headset with a PC via BT51 (For BH71 & BH71 Lite, a BT51 is required separately.)

Pair with PC Directly

1. Make sure the headset is in Bluetooth pairing mode.
2. Activate Bluetooth on your PC.
3. Select Yealink BH71 on your PC.

After the connection is successful, the headset's LED indicator turns solid blue for 2s.



- The headset can connect to up to two devices simultaneously.

Pair with PC via BT51




For BH71 & BH71 Lite, a BT51 is required separately.

The BT51 dongle has been pre-paired with the headset and is ready for use; you just need to power on the headset.

1. Connect the BT51 dongle to your PC.
2. The headset and PC pair automatically.

After the connection is successful, the BT51 dongle's LED indicator turns solid blue, and the headset's LED indicator turns solid blue for 2s.

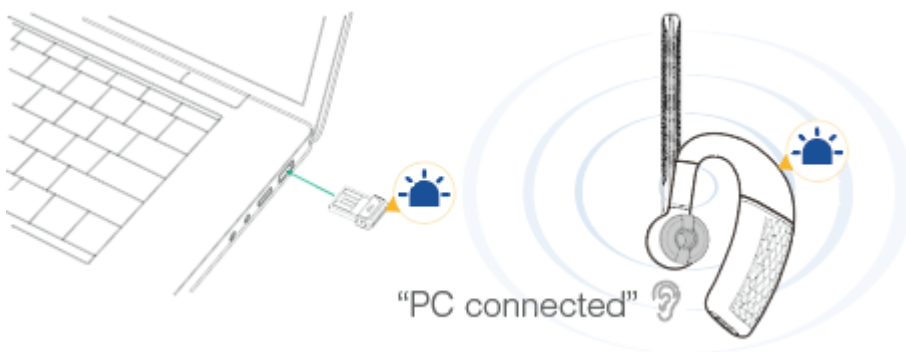

- The BT51 dongle can only connect to one headset at a time.
- The headset can connect to up to two devices simultaneously.