

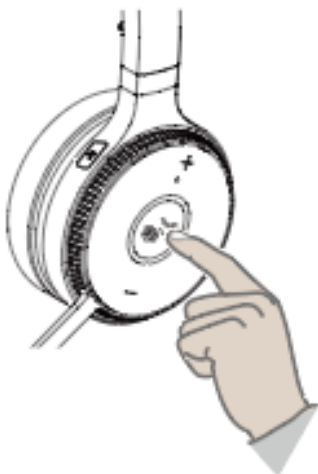 
WH66&WH67 Basic Usage

Headset/Base Control

For WH6X Headset

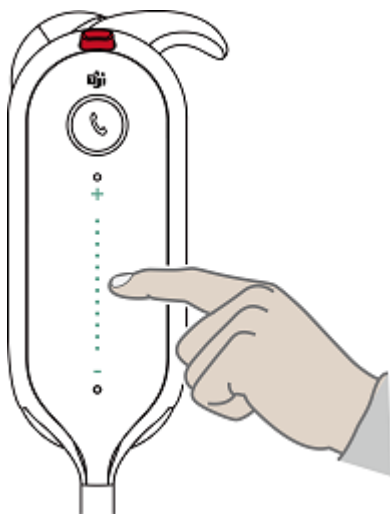
- For WH66 headset:

•



- For WH67 headset:

•



Func tion	Action
Answer call	Press the Call Control button or undock the headset (determined by the value of "Auto Answer when undocked").
End call	Press the Call Control button or dock the headset.  When the headset disconnects from the base for 1 minute during a call, the call will automatically hang up.

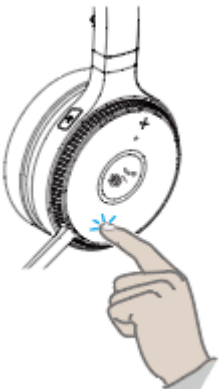
Redial	Double-press the Call Control button.
Hold call	Hold the Call Control button for 2 seconds.

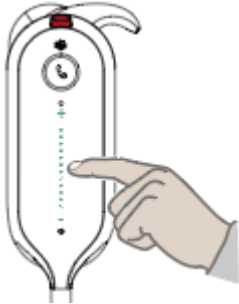
For WH66/WH67 Base

WH66/WH67 Base Function	Action
Place a new call	1. Tap the connected device Card or  (Teams version)/(UC version). 2. Enter the desired number. 3. Optional: Select the desired outgoing dialing device. 4. Tap Call.
Place a call from the directory	1. Tap  (Teams version), and go to Contacts/ (UC version). 2. Select the desired contact group and find the desired contact. 3. Tap the contact to enter the detail screen. 4. Tap .
Place a call from the call history	1. Do one of the following: -Tap  (Teams version) or , and go to History or . -Tap  or  and select  (UC version). 3. Select the desired call record to place a call.
Answer call	Tap  .
End call	Tap  .
Reject call	Tap  (Teams version). Tap  (UC version).
Silence a call (UC version)	Tap  .
Hold call	Tap  (Teams version).

	Tap  (UC version) and select Hold .
Resume call	Tap Resume .
Adjust volume	Tap  and drag the slider (Teams version). Tap  or  (UC version) .
Mute/unmute microphone	Tap  or  and drag the slider (Teams version). Tap  or  (UC version) .
Place a new call during a call	Tap  and select New call .
Redial	1. Tap  or the user account avatar. 2. Tap Redial. 3. Select a device to redial.  It is only available in the Teams version.

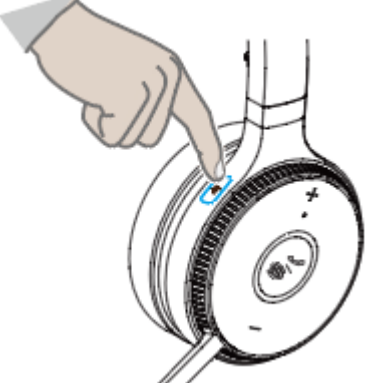
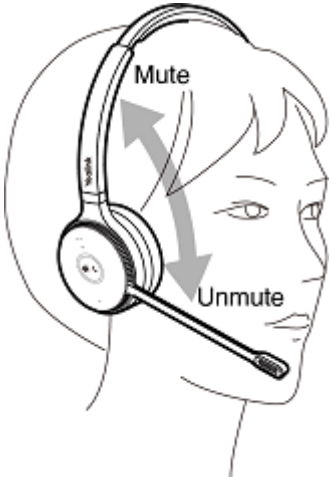
Adjust Volume

Headset	Function
WH66	
	Press the Volume Up button.
	Press the Volume Down button.
WH67	
	Slide up/down on the volume

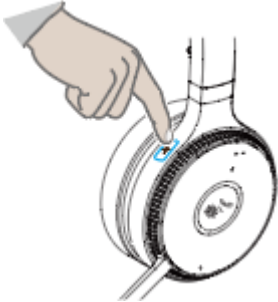 
	control panel.
---	----------------

! The playback volume can also be adjusted while you are on a call. While you are on a call, you cannot adjust the playback volume, and you can only adjust the call volume.

Mute/Unmute Microphone

Headset	Function
WH66	
	Press the Mute button. For WH66, you can also move the microphone boom arm up/down to mute/unmute. 
WH67	
	Press the Mute button.

Switch Headset/Speakerphone Mode

Headset	Function
WH66	
	Press and hold the Mute button. ! The call will automatically switch to the headset channel during a hands-free call after the headset reconnects.
WH67	
	Press and hold the Mute button. ! The call will automatically switch to the headset channel during a hands-free call after the headset reconnects.