

Yealink VCR11 Datasheet


Introduction

You can use the VCR11 Remote Control to control the Yealink MeetingBar/MeetingEye. VCR11 uses two AAA batteries (1.5V).

VCR11 Compatibility

For the VCR11 compatibility, refer to [Room Accessories Compatibility Lists](#).

Yealink VCR11

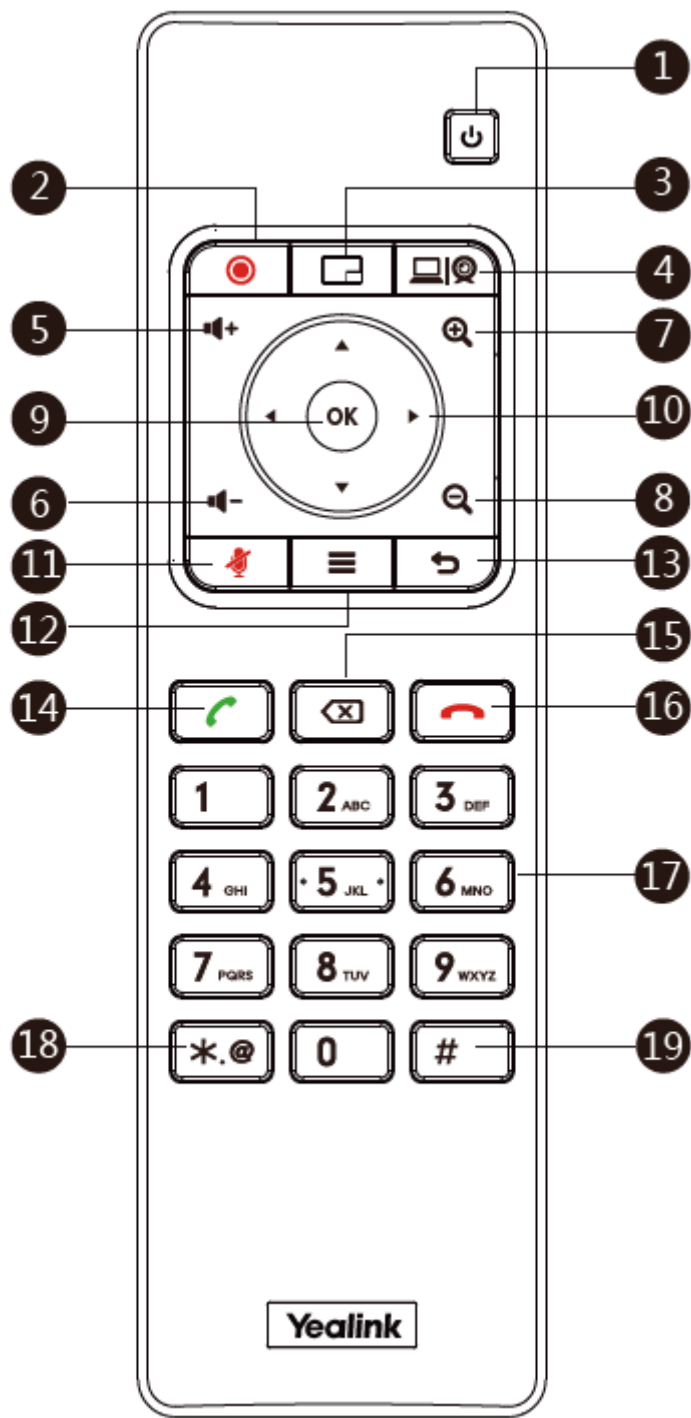

! Features marked with "*" are coming soon.

No.	Name	Description
1	Power on/off Key	Put the system to sleep mode or wake up the system.
2	Video	Start/stop recording the video and the audio.

	o Reco rding Key*	
3	Layo ut Key	- On the home screen, pressing the key will join the first meeting on the meeting list. - On the home screen or during a meeting, press and hold the key for 5 seconds will bring up the sidebar.
4	Cust om Key*	Customizable shortcuts are available.
5	Volu me up key	Increase the speaker volume.
6	Volu me dow n key	Reduce the speaker volume.
7	Zoo m in key	Long press the Home Key to bring up the sidebar and enter Camera Control to zoom in the camera's focal length.
8	Zoo m out key	Long press the Home Key to bring up the sidebar and enter Camera Control to zoom out the camera's focal length.
9	OK key	Go to the sub-menu to confirm the action or select one item.
10	Navi gati on Key	- Navigate through menu items. - Long press the Home Key to bring up the sidebar, enter Camera Control, and pan and tilt the camera to adjust the viewing angle.
11	Mute Key	Mute or unmute the microphone.
12	Hom e key	Press and hold the button for 5 seconds to bring up the sidebar.
13	Back key	Return to the previous menu.
14	Off- hook Key	Enter the pre-dialing screen, the dialing screen, or the answering screen.
15	Dele te Key	Delete one character at a time. Press and hold to delete all characters in the input field.
16	On-	End a call or exit a meeting call.

	hook Key	
17	Key pad	- Enter digits. - Go to the Dial page. - In the camera control interface, if a preset position has been set for a specific number key, pressing that number key will activate the corresponding preset position. If you press and hold the number key for 5 seconds, it will replace the corresponding preset position.
18	Char acter Key	Enter the special characters . * @ .
19	Poun d key	Enter the pound key (#).

FAQ

Does the VCR11 remote control support camera preset?

The VCR11 remote control supports up to 9 camera presets.