Let's get started.

Need help? Scan the QR code for video tutorials and the user guide.

link.gl-inet.com/mt3000-userguide-support

GL·iNet

GL-MT3000 / Beryl AX
AX3000 WiFi 6 Router

CONTENTS

English ---------- 01
Français ---------- 06
Deutsch ---------- 10
Español ---------- 14
Polski ---------- 18

English

SUPPORT

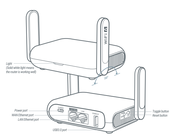

Repair / Reset

If you cannot access the web-based setup page or cannot connect to the router, you can press the **Reset** button:

- Press and hold for **3 seconds** and then release to reset your network. The light will turn blue and flash slowly, indicating the reset is in progress.
- Press and hold for **10 seconds**, and then release to reset the router to factory settings. The light will turn blue and flash rapidly. All data will be cleared when the light becomes solid blue.

SETTING UP

1. **Power On**
   When powered up, your router will broadcast both 2.4G and 5G WiFi signals with the SSID: **GL-MT3000-xxx** and **GL-MT3000-xxx-5G**.

2. **Connect via Wi-Fi**
   Scan the QR code printed on the bottom of the router to connect, or manually search and connect to **GL-MT3000-xxx**, then enter the default password printed on the router to connect.

3. **Set Up Router**
   Visit **http://192.168.8.1** in your browser to set up your router, start by choosing your preferred language.

SUPPORT

For the fastest assistance, tutorial videos, and FAQs, please scan the QR code above or visit **link.gl-inet.com/mt3000-userguide-support**

Technical Support

- For further questions, contact us via these methods:
  - Email: **support@gl-inet.com**
  - Discord: **link.gl-inet.com/website-discord-support**
  - Reddit: **link.gl-inet.com/website-reddit-support**
  - Forum: **forum.gl-inet.com**

TROUBLESHOOTING

If you encounter any issues with your router, this troubleshooting guide will help you resolve common problems.

Unable to Access the Router Admin Panel

- Ensure that you are connected to the router's Wi-Fi network.
- Check that you are using **http://192.168.8.1** as the admin address bar.
- If you still cannot access the admin panel, check the ethernet cable is properly plugged in the router's LAN port.
- Use another web browser or clear the browser cache and try again.
- Try turning the router off and then on again. If still this issue, press and hold on the reset button for 10 seconds to restore factory default settings.

No Internet Access After Setting Up the Router

- Ensure that the Ethernet cable is properly plugged into the router's WAN port.
- Turn your modem off and then on. Connect a computer directly to your modem via an Ethernet cable to check if you can access the Internet.
- Log into the router admin panel, and go to the Internet page to check if the router has obtained an IP address.
- Go to Network > Network Port Management and set up the MAC Mode to Clone with your current client. Then reboot.

Unable to Connect the Router to the GL.iNet App

- Make sure your GL.iNet App is updated to the latest version.
- Ensure that your phone is connected to the router's Wi-Fi network.
- Make sure the router is **GL** powered on and has completed its startup, then try scanning again in the App.

Forgot the Admin Panel Password

- With the router powered on, press and hold the reset button for 10 seconds, release the button when the blue indicator light flashes rapidly, then wait for the router to restart.
- After it restarts, log into the web admin panel **(http://192.168.8.1)** and reset the router's password.

Forgot the Wi-Fi Network Password

- If you haven't changed the WiFi password, you can find the password on the product label located on the bottom of the router.
- If you've changed the router WiFi password before, connect your device to the router's web admin panel via an Ethernet cable, then view or modify your Wi-Fi password in the Admin Panel.

The USB port isn't working when using a 5V power adapter. What should I do?

- For the best performance, please use the original power adapter. Ensure that it can supply enough current to power both the router and any device connected to its USB port.

WARRANTY

- We provide **two-year limited warranty** for routers and **2-month limited warranty** for accessories.
- Extra warranty may apply according to the location in which the product purchase took place.
- Any damage to the router caused by **liquid**.
- Any damage to the router caused by not **following** the instructions will render this warranty **null** and void.
- Any damage to the router caused by modifying the PCBA, components or case will render this warranty **null** and void.
- Issues caused by the use of third-party firmware may not get official support from us.
- Any damage to the router caused by inappropriate use, e.g. inappropriate voltage input, high temperature, dropping in the water or on the ground will render this warranty **null** and void.
- Pictures on the instructions are only for reference. We reserve the right to change or modify these materials without further notice.

FCC ID: 2AFRM-MT3000

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Industry Canada's licence-exempt RSS-247 standard. Operation is subject to the following two conditions:
(1) This device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible de compromettre le fonctionnement.
Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.
Cet émetteur ne doit pas être situé au même endroit ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.

The user manual for LTE-enabled devices shall contain instructions related to the restrictions mentioned in the above sections, namely that:
A. the device not transmit when there is no valid SIM in the device; and
B. the user guide shall contain instructions on how to remove and insert a SIM.
Le manuel d'utilisation des appareils LTE doit contenir des instructions relatives aux restrictions mentionnées dans les sections ci-dessus, à savoir que:
A. l'appareil ne doit pas émettre lorsqu'aucune carte SIM valide n'est présente dans l'appareil; et
B. le guide d'utilisation doit contenir des instructions sur la façon de retirer et d'insérer la carte SIM.

| | | |